CUPOWER

BORN TO BE LIGHT.

Instruction manual

CLO adjustment via DALI

www.cupower.com

Contents

1. Introduction 3

2. Prepare 3

3. DALI Instruction Description 4

1. Purpose

This document describes how to configure CLO using the DALI command.

2. Preparation

The PC software masterCONFIGURATOR and CUPOWER i-Master.

3. DALI Instruction Description

Figure 1 is our NFC CLO configuration interface, and figure 2 is the DALI CLO configuration interface. In Figure 2, we have marked the NFC parameters corresponding to each parameter, and customers can refer to and change the parameters accordingly.

When setting up, attention should be paid to the rules:

1. Setting enable CLO to 1 enables the CLO; if 0, it is disabled.

2. Time1 needs to be configured to 0.

3. The previous Time is not greater than the next Time.

4. The setting range of Percent is from 70% to 100%, and the previous Percent should not exceed the subsequent one.

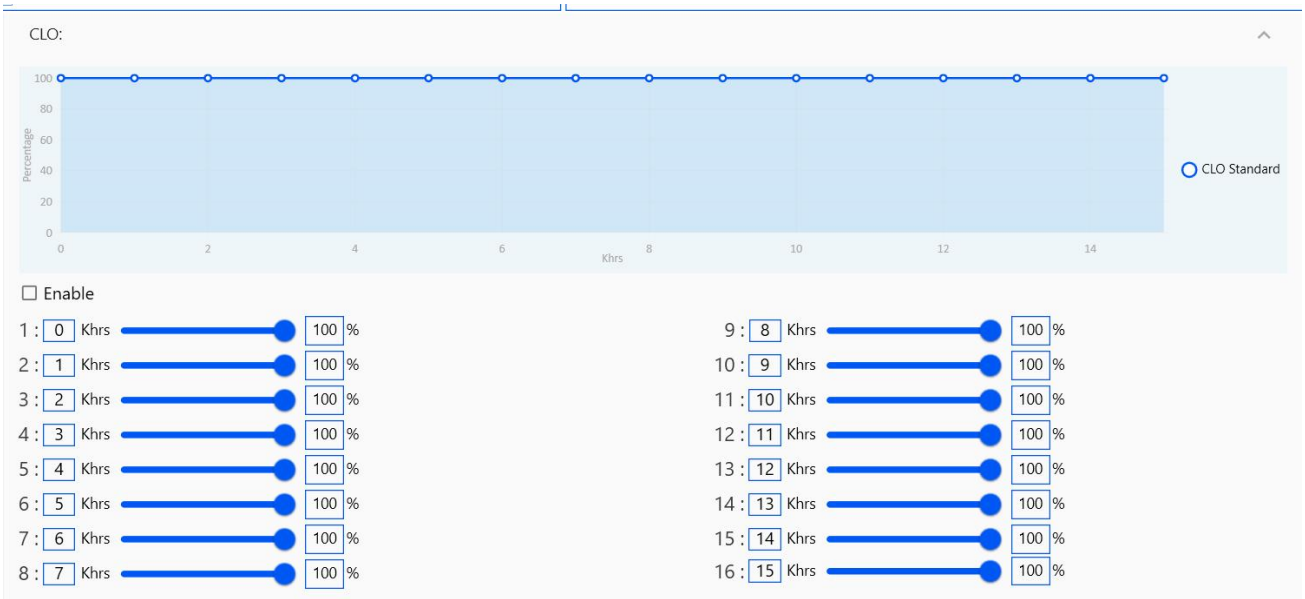

Figure 1

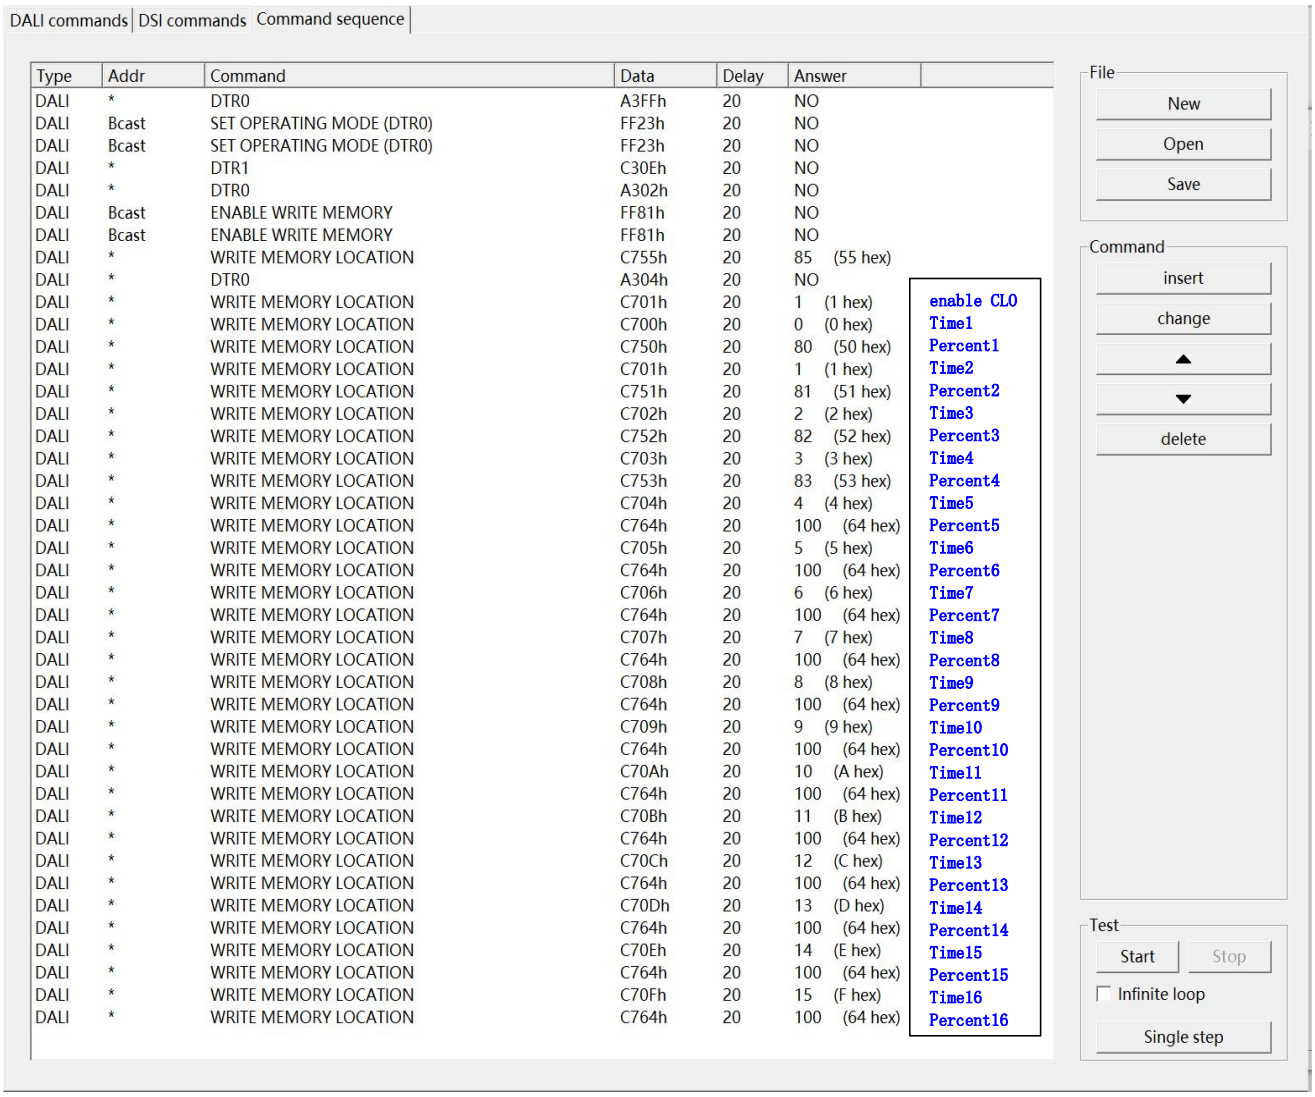

Figure 2

4. Note

Please send the driver batch number to CUPOWER to confirm whether the driver supports CLO adjustment via DALI.

CUPOWER

CUPOWER Europe GmbH

Ahornweg 5a,

58675 Hemer, Germany

+49 2372-568-7570

dirk@cupower.com

CUPOWER North America, Inc.

655 Raco Dr. Suite A,

Lawrenceville, GA 30046, USA

+1 905 658-2500

scottr@cupower.com

Shenzhen Xiezhen Electronics Co., Ltd.

Floor 2, Building E, Taohuayuan Smart & Innovation Park,

Bao'an District, Shenzhen, China

+86 755-2781-9400

sales@cupower.com

Hunan Xiezhen Electronics Co., Ltd.

Building 11, Innovation Park, Linyi Road, Bailutang Town,

Suxian District, Chenzhou, Hunan, China

+86 735-265-3770

sales@cupower.com

www.cupower.com